



OWNER'S & INSTALLATION MANUAL

AIR CONDITIONER

Please read this installation manual completely before installing the product.
Installation work must be performed in accordance with the national wiring standards by authorized personnel only.
Please retain this installation manual for future reference after reading it thoroughly.

NEW WIDE WIRED
REMOTE CONTROLLER

PREMTB001 / PREMTBB01



MFL69279713
Rev.00_031416

2 TIPS FOR SAVING ENERGY

TIPS FOR SAVING ENERGY

Here are some tips that will help you minimize the power consumption when you use the air conditioner. You can use your air conditioner more efficiently by referring to the instructions below:

- Do not cool excessively indoors. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, in a short period of time.
- Open windows regularly for ventilation as the indoor air quality may deteriorate if the air conditioner is used for many hours.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or weaken the cooling / dehumidifying functions.

For your records

Staple your receipt to this page in case you need it to prove the date of purchase or for warranty purposes. Write the model number and the serial number here:

Model number : _____

Serial number : _____

You can find them on a label on the side of each unit.

Dealer's name : _____

Date of purchase : _____

IMPORTANT SAFETY INSTRUCTIONS 3

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product

- The installation requires expert skills, and it should be installed by the service center or other shops specialized in the installation and recognized by our company.
- For all the problems arising after installation by someone who has no relevant qualifications, our company will not provide free service.
- The following safety cautions are provided to prevent unexpected dangers or losses.

⚠ WARNING

If the user does not follow the mandatory items, it may result in serious injury or death.

⚠ CAUTION

If the user does not follow the mandatory items, it may cause personal injury or property damage.

- ⓘ Warning and Caution are to call the user's attention to the possible danger. Read the following them carefully in order to prevent a safety accident.

- ⓘ Warning and Caution are indicated in this guide and the product itself to help protect the users from danger.

⚠ WARNING**Installation**

- Ensure that all installation, service or re-installation is carried out by a qualified person. Do not dismantle or modify the product in any way. Failure to follow these instructions may result in a fire, explosion or electric shock

In-use

- Do not place flammable material or stuffs around the controller.
 - It will cause fire.
- Do not allow water to run into the product.
 - It will cause electric shock or breakdown.
- Do not give the shock to the product.
 - It will cause breakdown when giving the shock to the product.
- Request to the service center or installation specialty store when the product becomes wet.
 - It will cause fire or electric shock.
- Do not expose to shock using sharp and pointed objects.
 - It will cause breakdown by damaging parts.

⚠ CAUTION**In-use**

- Do not clean using the powerful detergent like solvent but use soft cloths.
 - It will cause fire or product deformation.
- Do not press the screen using powerful pressure or select two buttons.
 - It will cause product breakdown or malfunction.
- Do not touch or pull the lead wire with wet hands.
 - It will cause product breakdown or electric shock.



TABLE OF CONTENTS

3 IMPORTANT SAFETY INSTRUCTIONS

6 PART DESCRIPTION

7 OWNER'S INSTRUCTION

7	Standard Operation - Standard Cooling	27	Function setting - Filter Sign Clear
8	Standard Operation - Power Cooling	28	Function setting - Child Lock
9	Standard Operation - Heating Mode	29	Function setting - Changing Current Time
10	Standard Operation - Dehumidifying Mode	30	Function setting - Change Temperature
11	Standard Operation - Monsoon Dehumidifying Mode	31	Function setting - Power Consumption
12	Standard Operation - Fan Mode	32	Function setting - Indoor/Outdoor Unit Model Information
13	Standard Operation - Auto Operation Mode	34	Function Setting - WLAN(Wireless LAN) Module Access Point mode
14	Standard Operation - Temperature Setting / Room Temperature Check	35	Function Setting - Smart Load Control
15	Standard Operation - Fan Speed / Airflow	36	Programming - Simple Reservation
16	Sub Function - Plasma Purification	37	Programming - Sleep Reservation
16	Sub Function - Energy-Saving Cooling Operation	38	Programming - ON Reservation
17	Sub Function - Manual Settings for Robot Cleaning	39	Programming - OFF Reservation
18	Sub Function - Electric Heater	40	Programming - Weekly Reservation
19	Sub Function - Humidifier	42	Programming - Holiday Reservation
19	Sub Function - Mosquito Away	43	Ventilation Product User Manual - Interlinked Air conditioner and Ventilation
20	Sub Function - Himalaya Cooling	44	Ventilation Product User Manual - Interlinked Operation with General Ventilation
21	Sub Function - Comfort Cooling	45	Ventilation Product User Manual - Single Operation with General Ventilation
22	Function setting - Vane Angle Control	46	Ventilation Product User Manual - Interlinked Operation with Direct Expansion Ventilation
23	Function setting - Zone Control	47	Ventilation Product User Manual - Single Operation with Direct Expansion Ventilation
24	Function setting - Elevation Grill	48	Ventilation Product Additional Operations - Fast/Energy Saving
25	Function setting - Auto Cleaning	49	Ventilation Product Function Settings
26	Function setting - Automatic Setting for Robot Cleaning	50	Ventilation Product Reservation Settings
		51	Ventilation Product Installer Setting Functions


52	Ventilation Product Installer Setting Functions - Ventilation Fan Speed
53	Different Mode Drive
54	Self-diagnosis for Trouble Mode
54	Outage Compensation Function
55	Oil Change Warning

56 INSTALLATION INSTRUCTION

58	Group Control	80	Installer Setting - Function Control Setting for Group Control
59	Installer Setting - Installer Setting Mode Approach	81	Installer Setting - Option Function Setting
63	Installer Setting - Test run	82	Installer Setting - Indoor Unit Address Checking
64	Installer Setting - Setting Address of Central Control	83	Installer Setting - Setting for Refrigerant Leak Detector
65	Installer Setting - ESP Setting	84	Installer Setting - Static Pressure Step Setting
67	Installer Setting - Thermistor	85	Installer Setting - Fan operation in the cooling mode and thermal off conditions
68	Installer Setting - Ceiling Height Selection	86	Installer Setting - Primary Heater control setting
69	Installer Setting - Static Pressure Setting	87	Installer Setting - Air-conditioner Fan operation interlocked with ventilation
70	Installer Setting - Remote Controller Master/Slave Setup	88	Installer Setting - Indoor unit Auto-Start setting
71	Installer Setting - Override Master/Slave Setting	89	Installer Setting - Occupancy Duration Time Setting
72	Installer Setting - Dry Contact mode Setting	90	Installer Setting - Setting for Simple Dry contact unit
73	Installer Setting - Zone State	91	Setting the stage value of Comfort cooling
74	Installer Setting - Celsius/Fahrenheit Switching	92	Setting Fan continuous
75	Installer Setting - Zone Type Setting	93	Outdoor unit Function master/slave
76	Installer Setting - Zone Number Setting	94	Function of indoor unit silent mode
77	Installer Setting - Celsius Control Setting	95	Setting the outdoor unit defrost mode
78	Installer Setting - Emergency Heater Setting	96	Setting temperature-based fan speed 'auto'

97 CHECKLIST BEFORE REPORTING A BREAK-DOWN

PART DESCRIPTION

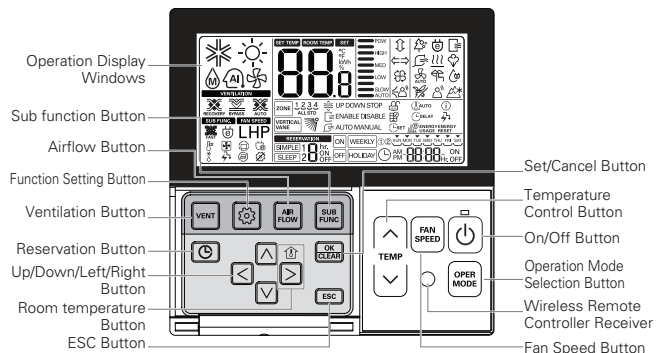

Operation Display Windows : Displays the status of operation and settings

Ventilation Button : For interlocking operations of air-conditioner and ventilator

Function Setting Button : To select the additional operations function

Airflow Button : To select the airflows

Sub function Button : To select the additional operations function

Reservation Button : To program the schedule

Up/Down/Left/Right Button : To change the settings in the menu

Room temperature Button : To check the indoor temperature

ESC Button : To exit from the menu

Set/Cancel Button : To save the settings in the menu

Temperature Control Button : To change the desired temperature

Fan Speed Button : To select the fan speed

On/Off Button : To turn on/off with a remote controller

Mode Selection Button : To select the operating mode

Wireless Remote Controller Receiver

Accessories



Connecting Cable
1 EA, 10m



Screw (4 EA)



Owner's /
Installation manual




Inform label
(8EA-8Languages)

OWNER'S INSTRUCTION

Standard Operation – Standard Cooling

A pleasant and fresh breeze cools off the room.

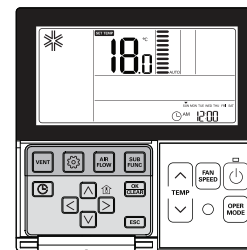

Press button in the remote controller to begin cooling.

- The initial temperature for cooling is set at 18°C by default.

- The desired temperature can be reached by 1°C or 0.5°C depending on the type of Indoor Unit.

Press button to set the desired temperature below the indoor temperature.

- Press button to see the indoor temperature.

✦ If the desired temperature is set above the indoor temperature, cool air will not blow out but only fan will work instead.

Press button during operation to stop cooling.


What is a 3-minute delay function?

A cool air will not blow out immediately after stopping cooling in order to protect a compressor. After 3 minutes, the cool air will blow out as the compressor runs.

- The range of the desired temperature is 18°C~30°C for cooling.
- 5°C is recommended for the difference between indoor and outdoor temperature.

Standard Operation – Power Cooling

It cools off faster and more powerfully.

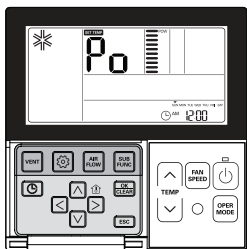

Press  button to turn on the indoor.

Press  button during cooling and it will move to "Po" and start power cooling.

* Some units run the power cooling after power breeze.

Press  button during operation to cancel the power cooling and run the fan speed automatically.

What is a power cooling?

Desired temperature: **Po** (actual temperature 18°C)

Fan speed: Power breeze


Breeze direction: cooling position

} Running to cool down the indoor temperature quickly.

* Some units do not have power cooling function.

Standard Operation – Heating Mode

A warm breeze blows out to the room.

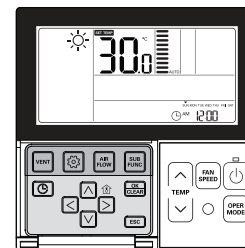

Press  button in the remote controller, and press  button to select heating.

- The initial temperature for heating is set at 30°C by default.

- The desired temperature can be reached by 1°C or 0.5°C depending on the type of Indoor Unit.


Press  button to set the desired temperature above the indoor temperature.

- If the indoor temperature is set above the desired temperature, warm air will not blow out but only fan will work instead. (Press  button to see the indoor temperature.)

Press  button during operation to cancel heating.

- The range of the desired temperature is 16°C~30°C for heating.
- Heating applies only to cooling/heating models.
Heating will not work in the cooling only models.

It removes moisture while cooling gently.

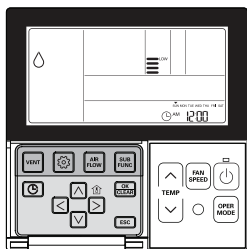


Press  button to select Dehumidify.

Press button repeatedly to adjust airflow SLOW LOW MED HIGH AUTO.

- The initial fan speed in dehumidifying mode is set at 'Low'.

- Using this function in the rainy season or high humidity, you can operate simultaneously dehumidifier and cooling mode to remove humidity effectively.
- The menu of fan speeds may vary depending on the product type.

This is monsoon region-specific dehumidification function.

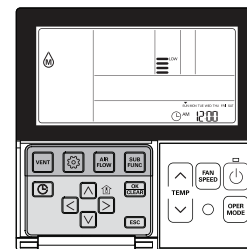

Press  button to select Dehumidify.


Press button repeatedly to adjust airflow SLOW LOW MED HIGH AUTO.

- The initial fan speed in dehumidifying mode is set at 'Low'.

- Using this function in the rainy season or high humidity, you can operate simultaneously dehumidifier and cooling mode to remove humidity effectively.
- The menu of fan speeds may vary depending on the product type.

Standard Operation – Fan Mode

It circulate air at room temperature, without heating or cooling it.

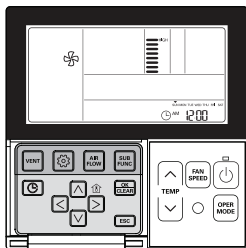

Press  button.

Press  button to select Fan mode.


Press  button repeatedly to adjust wind powerfulness SLOW LOW MED HIGH AUTO.

- The compressor will not run in the Fan mode.

- It circulates the air without heating or cooling.
- The menu of fan speeds may vary depending on the product type.

Standard Operation – Auto Operation Mode

It automatically selects an operating mode.

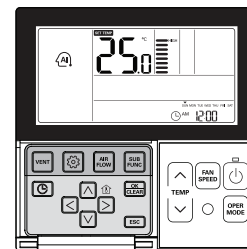

Press  button.

 
Press  button to select Artificial intelligence Mode.

The temperature can be adjusted as illustrated below for cooling/heating models.



◀ Display window (cooling/heating models).

For the cooling only models, press  button to adjust the temperature range '-2'~'2' starting at '0'.



◀ Display window (cooling model)

- 2 When cold
- 1 When cool
- 0 When appropriate
- 1 When warm
- 2 When hot

In the Auto Operation mode.


- You can use  button.
- If it doesn't operate as you desire, you can select the other operation mode manually.



Standard Operation – Temperature Setting / Room Temperature Check

Temperature Setting

The temperature can be controlled easily to the desired set point.

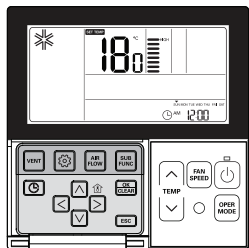

Press temperature control button to select the desired temperature.



Press the button to raise the temperature by 1°C.

Press and hold the button to raise the temperature by 1°C automatically.

Press the button to lower the temperature by 1°C.

Press and hold the button to lower the temperature by 1°C automatically.

- Pressing the  button displays the actual room temperature for a short period.
- The controller displays the selected temperature.

In the cooling mode

If the desired temperature is higher than the indoor temperature, cooling will not operate.
Set the desired temperature lower than the indoor temperature.

In the heating mode (cooling/heating models)

If the desired temperature is lower than the indoor temperature, heating will not operate.
Set the desired temperature higher than the indoor temperature.

Room Temperature Check

Press  button to display the current temperature.

- It returns to the desired temperature after about 5 seconds.


* The actual feel temperature and the indoor temperature displayed in the remote controller may not be identical due to the inconsistent temperature distribution in a space where the unit is installed.

- The range of the desired temperature is 18°C~30°C for cooling, and 16°C~30°C for heating.
- 5°C is recommended for the difference between indoor and outdoor temperature.

Standard Operation – Fan Speed / Airflow

Fan Speed

The fan speed can be adjusted easily to the desired set point.

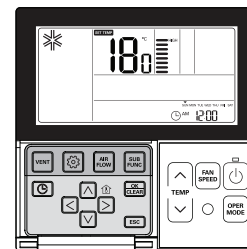

Press  button to select the desired wind powerfulness.

- Press  button repeatedly to adjust wind powerfulness SLOW LOW MED HIGH POW AUTO.
- The menu of fan speeds may vary depending on the product type.
- See the product manual for more details.

Ex) Fan speed selection



Airflow

Wind direction can be adjusted easily to the desired set point.

Press  button to select the desired wind direction.

- Press Airflow button to select the direction of comfortable wind Up/Down/Left/Right Left/Right Up/Down.
- The menu of wind directions may vary depending on the product type.
- See the product manual for more details.


Ex) Wind direction selection

Airflow	Remote Controller Display Window	
Comfortable wind		
Up/Down/Left/Right		 (ON simultaneously)
Left/Right		
Up/Down		



Sub Function - Plasma Purification

Air purifying function cleans the air in the room.

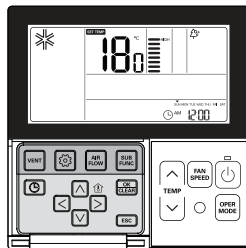

Press **[FAN]** button repeatedly until  icon displays.
Press **[MODE]** button when  icon blinks to select or cancel the purifying function.

* The  icon will be displayed in case of setting option and disappear in reverse case.

Press **[ESC]** button to exit the setup mode.


* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

* If the **[FAN]** button is not selected before you exit, the changes will not apply.

- * Some products may not include Air purifying function because it is an additional function.
- * Air purifying is available only when the unit is running.
- * If you want to run the air purifying only, press Sub function button in the Fan mode and select Plasma Purification.

Sub Function - Energy-Saving Cooling Operation

Energy-saving cooling is a function to improve the energy-saving capacity and comfort by adjusting the desired temperature in the cooling mode.

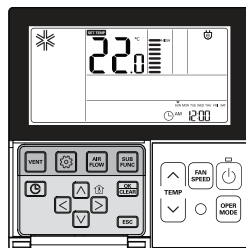

Press **[FAN]** button repeatedly until  icon displays.
Press **[MODE]** button when  icon blinks to set or cancel the Energy-saving function.

* The  icon will be displayed in case of setting option and disappear in reverse case.

Press **[ESC]** button after setup.

* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.


* If the **[FAN]** button is not selected before you exit, the changes will not apply.

- * Energy-saving function is available only in the cooling mode.
- * Some products may not include Energy-saving function.

Sub Function – Manual Settings for Robot Cleaning

Robot Cleaning is a function that a built-in cleaner performs a filter cleaning automatically when air-conditioner runs for the scheduled hours.

This function can be set in 30 seconds after the unit stops.

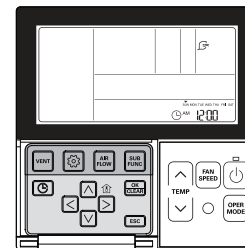

Press **[FAN]** button repeatedly until  icon displays.

Press **[MODE]** button when  icon blinks to set or cancel the Robot Cleaning function.

* The  icon will be displayed in case of setting option and disappear in reverse case.

* Robot Cleaning icon disappears automatically when cleaning is done.

* In order to cancel Robot Cleaning function manually, press Sub function button repeatedly until the Robot Cleaning mode in the menu, and press **[FAN]** button to cancel Robot Cleaning function.


Press **[ESC]** button after setup.

* Some products may not include Robot Cleaning function.

* If the **[FAN]** button is not selected before you exit, the changes will not apply.

Sub Function – Electric Heater

It is a function to amplify the heating capacity by running an electric heater in the heating mode. This function can be set only in the heating mode.

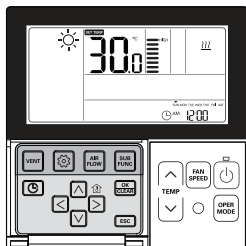

Press **[HEATER]** button repeatedly until **|||** icon displays.

Turn on/off electric heater by pressing **[HEATER]** button.

* The **|||** icon will be displayed in case of setting option and disappear in reverse case.

Press **[ESC]** button after setup.

* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

* If the **[HEATER]** button is not selected before you exit, the changes will not apply.

- Heater function is additional function and it only operates in selected models.
- The indoor unit product with Auxiliary Heater function set automatically displays (H) icon during the AUXILIARY HEATING OPERATION.

When using non-heat recovery out door unit, emergency heater can be turned on for simultaneous heating and cooling. Indoor unit with the emergency heater must be turned OFF for simultaneous cooling and heating

Emergency heater can be turned on while in error code in case of emergency. Electric heater icon is displayed on LCD display window with error code when emergency heater is on while in error


* Exception case: Error code 1,3,9,10

* If the previous mode of the Indoor unit is COOL, DRY or FAN ONLY mode, heater must be turned on manually.



Sub Function – Humidifier

It is a function to run the built-in humidifier when the air in the room is dry.

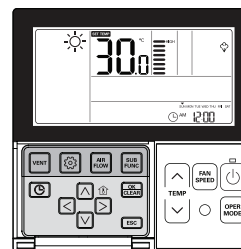

Press **[HUMIDIFIER]** button repeatedly until Humidifier **☁** icon displays.

Turn on/off Humidifier by pressing **[HUMIDIFIER]** button.

* The **☁** icon will be displayed in case of setting option and disappear in reverse case.

Press **[ESC]** button after setup.


* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

* If the **[HUMIDIFIER]** button is not selected before you exit, the changes will not apply.

- Some products may not include humidifying function.

Sub Function – Mosquito Away

Only products with mosquito away function can use this.

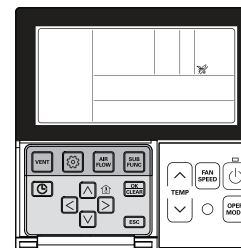

Press **[MOSQUITO AWAY]** button repeatedly until mosquito away **🦟** icon displays.

Turn on/off mosquito away function by pressing **[MOSQUITO AWAY]** button.

* The **🦟** icon will be displayed in case of setting option and disappear in reverse case.

Press **[ESC]** button after setup.


* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

* If the **[MOSQUITO AWAY]** button is not selected before you exit, the changes will not apply.

- Some products may not include mosquito away function.

Sub Function – Himalaya Cooling

Only products with Himalaya Cooling function can use this.

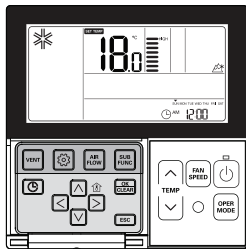

Press **ON/OFF** button repeatedly until Himalaya cooling  icon displays.

Turn on/off Himalaya cooling function by pressing **ON/OFF** button.

✦ The  icon will be displayed in case of setting option and disappear in reverse case.

Press **ESC** button after setup.


✦ If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

✦ If the **ON/OFF** button is not selected before you exit, the changes will not apply.

- Some products may not include Himalaya cooling function.


Sub Function - Setting method for Comfort cooling

Comfort cooling is the function to keep the comfortable sensation by controlling the cooling strength automatically without turning off the power of the product even after room temperature reaches the desired temperature selected.

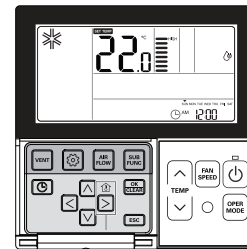

Press the Additional operation button until the icon of Comfort cooling is displayed.


Comfort cooling icon is blinking on the display screen, and if **ON/OFF** button is pressed at this time, Comfort cooling icon is fixed and the function is set.

 

Press the **ESC** button to exit the setting mode.


Function setting - Vane Angle Control

You can adjust the angles of air flow.

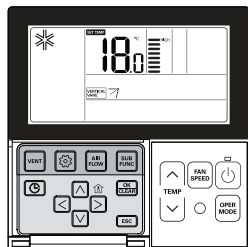

Press button.

 Press button repeatedly to select the Vane Angles Setting in the menu.



(Vane Number)

(Vane angle set point)

Select the Vane number using button.

- * Vane Number: No.1, No.2, No.3, No.4, ALL, Standard.
- The selected vane activates. Verify the active vane.
- Select 'All' to program the angle of all the vanes.
- Select 'Standard' to program as the factory default settings.

Select the vane angle using button, and press button.

 
- The range of vane angles setting can be changed to 5 levels or 6 levels according to the product.
- When selecting 'Standard' for Vane number, the vane angle does not move.

Program the vane angles for the remaining vanes as the same as above.

- * Some products include only No.1 and No.2 vanes.

Press button to exit after setup.

- * If no button is selected for about 60 seconds after setup, it exits the setup mode automatically.
- * If the button is not selected before you exit, the changes will not apply.




1 2



Function setting - Zone Control

You can turn on/off the zones by used of it.

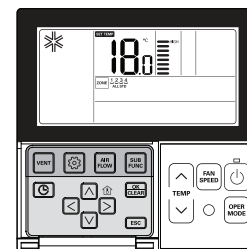

Press button repeatedly until icon flash.


Press button to select the zone that which one you want to turn on/off.

Press button to turn on/off zone.

Press button to select other zones if you want.
Then, Press button to turn on/off that zone as mentioned above.

Press button to exit or system will automatically release without any input after 60 seconds.


- * When exiting without pressing set button, the manipulated value is not reflected.

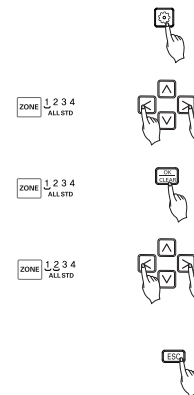



Function setting - Elevation Grill

This function is to run the elevation grill to clean the filter of indoor unit.

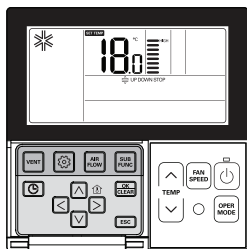

Press button repeatedly until icon is blinking.

Move to DOWN using button, and press button. DOWN icon displays and the elevation grill will descend.



When the elevation grill descends to the desired point, move to 'Stop' icon using button and press button to stop the elevation grill.



When filter cleaning is finished, fix the filter to the grill, and move to UP icon using button. And press button to ascent the elevation grill.




Press button to exit after setup.

- * If no button is selected for about 60 seconds after setup, it exits the elevation grill mode automatically.
- * If the button is not selected before you exit, the changes will not apply.

- The elevation grill function is available only in the indoor unit with a built-in elevation grill.

Function setting - Auto Cleaning

Auto cleaning is a function to remove moisture or mold after turning off the cooling system by drying the inside of indoor unit.

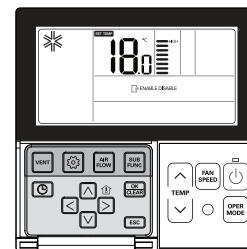

Press button repeatedly to select Auto cleaning in the menu.

icon will display and the current status of ENABLE or DISABLE icon will blink.

Move to ENABLE using button, and then ENABLE icon will blink. Press button to set the auto cleaning function.



When returning to DISABLE, press button to select DISABLE icon. And then press button cancel the auto cleaning function.

Press to exit after setup.

- * If no button is selected for about 60 seconds after setup, it exits the setup mode automatically.
- * If the button is not selected before you exit, the changes will not apply.


- Some products may not include auto-drying function.



Function setting - Automatic Setting for Robot Cleaning

Robot Cleaning is a function that a built-in cleaner performs a filter cleaning automatically when air-conditioner runs for the scheduled hours.

It programs the robot cleaning function runs manually or automatically.

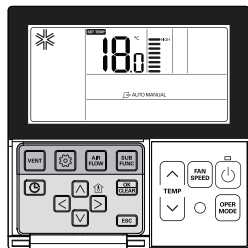

Press button repeatedly until icon is blinking.

Move to AUTO icon using button, and press button to select the automatic robot cleaning function.



When returning to the manual robot cleaning, press button to move to MANUAL icon and press button to select the manual robot cleaning function.


Press button to exit after setup.

- * If no button is selected for about 60 seconds after setup, it exits the setup mode automatically.
- * If the button is not selected before you exit, the changes will not apply.

- Some products may not include robot cleaning function.

Function setting - Child Lock


This function is to lock the buttons to prevent children or others from careless using.

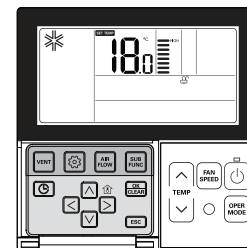

Press button repeatedly until icon is blinking.

Move to icon using button.

 The icon will blink, and press button to set the lock function.



To cancel the lock function, press button to move to icon. And then press button.


Press button to exit after setup.

- * If no button is selected for about 60 seconds after setup, it exits the setup mode automatically.
- * If the button is not selected before you exit, the changes will not apply.




Function setting – Filter Sign Clear

This function is to cancel the filter indicator for filter cleaning of indoor unit.

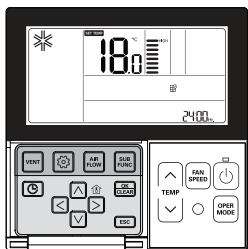

 Press button repeatedly until icon is blinking.




If the system includes a displaying function of the time remaining until next filter cleaning, it will display the remaining time in the current time section.

When the filter cleaning indicator blinks, press button to cancel the filter cleaning sign.

- Dust in the filter may reduce cooling/heating efficiency and cause high electricity bill. Therefore, be sure to clean the filter whenever cleaning time is expired.

* Filter cleaning indicator is automatically cancelled without any separate cancellation after certain period of time.

Function setting – Changing Current Time

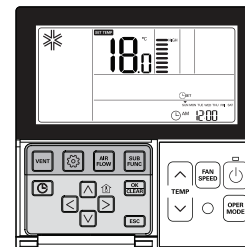

Press button repeatedly to select the time setting in the menu. 'Time Setting' icon will display and day of the week will blink in the current time section.

Move to 'Day' using button.



Press button after setting the day to move to the 'AM/PM' setting mode.



Press button to set 'AM/PM'.



Move to 'Hour' section using button. 'Hour' section will blink.



Press button to set the current hour.



Move to 'Minute' section using button. 'Minute' section will blink.



Press button to set the current minute.



When the day/hour/minute setting is finished, press button to complete the current time setting.


* If pressing other buttons during the current time setting, it will cancel all the changes made and exit the time setting mode.

* If the button is not selected before you exit, the changes will not apply.



Function setting – Change Temperature

Change temperature is a function to automatically change the temperature between cooling/heating according to the temperature in the Auto operation mode.

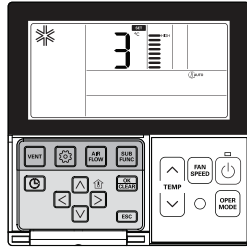

Press **[TEMP]** button repeatedly to select the change temperature function in the menu.

[AUTO] icon will display and the changed temperature will blink in the temperature display section.

Press **[A]** **[V]** button to change the temperature set value.

* Range of change temperature: programmable within 1~7

When the desired temperature is displayed, press **[SET]** button to complete the setting.

Press **[ESC]** button to exit after setup.

* If no button is selected for about 1 minute after setup, it exits the setup mode automatically.


* If the **[SET]** button is not selected before you exit, the changes will not apply.

* This function is available only for cooling/heating system.

Example of Change Temp


Conditions

- 1) Mode: Auto operation
- 2) Desired temperature: 22°C
- 3) Change temperature: 3°C

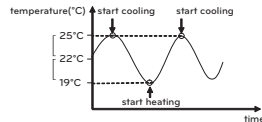

If it falls under the conditions described above, it will run as shown in the graph.

Function setting – Power Consumption

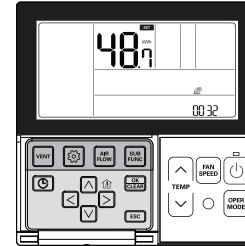


Press **[MODE]** button repeatedly to select the power consumption in the menu.

[PDI] icon will display and the accumulated power consumption will display in the temperature and the current time display section.


Press **[ESC]** to exit.

If no button is selected for about 1 minute after setup, it exits the setup mode automatically.

Ex) when the accumulated power consumption is 3248.7 kWh

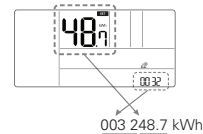

- Some product may not include the power consumption display function
- This function is available only when PDI is installed.

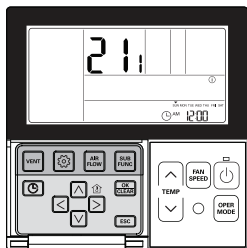

① icon will display and the Indoor/outdoor unit model information will display in the temperature display section.

If no button is selected for about 1 minute after setup, it exits the setup mode automatically.

Outdoor Unit Indoor Unit Capacity


- Some product may not include the indoor/outdoor unit model information function.

<Indoor/Outdoor Unit Model Information Table>

Category	Display Values								
Outdoor Unit	No.	Model	No.	Model	No.	Model			
	0	Multi-V	1	Multi	2	Single			
Indoor Unit	No.	Model	No.	Model	No.	Model			
	0	CST	5	Direct Expansion Ventilation	A	Hydrokit for medium temperature			
	1	Duct	6	Console	B	Hydrokit for high temperature			
	2	CVT	7	Single Package	C	Showcase			
	3	PAC	8	General Ventilation	D	VAHU			
	4	RAC	9	AWHP	E	FAU			
Capacity		No.	Capacity	No.	Capacity	No.	Capacity	No.	Capacity
	Multi-V	0	5k	4	15k	8	36k	C	76k
		1	7k	5	18k	9	42k	D	96k
		2	9k	6	24k	A	48k	E	-
		3	12k	7	28k	B	54k	F	-
	Multi	0	5k	4	12k	8	20k	C	-
		1	7k	5	14k	9	24k	D	-
		2	8k	6	15k	A	30k	E	-
		3	9k	7	18k	B	36k	F	-
	Single	0	9k	4	24k	9	54k	55k	-
		1	12k	5	30k	A	60k	62k	-
		2	18k	6	36k	B	70k	-	-
		3	21k	7	42k	C	85k	-	-
Data unavailable (common)	-								

Function Setting - WLAN(Wireless LAN) Module Access Point mode

It is the function to operate WLAN (Wireless LAN) module connected to the product in access point mode. This function is available for particular models to apply WLAN Module. Refer to the installation manual of product whether available or not.

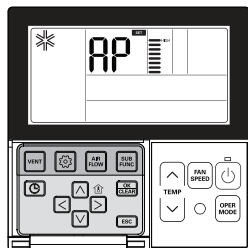

Push the  button repeatedly until the term of 'AP' is displayed on the screen.

Press the  button.

✦ After setup, it automatically gets out of setup mode.


While WLAN module is operating in access point mode, the term of 'AP' blinks on the screen of wired remote controller.

- It will take approx. five (5) seconds before WLAN module operates in access point mode.
- In the case WLAN module is not installed, the access point mode does not work.

Function setting - Smart Load Control

Smart Load Control is the function to operate by calculating the necessary efficiency from the indoor and outdoor air temperature and humidity.

The corresponding function setting is available when connecting the products designated as outdoor unit Function setting master.

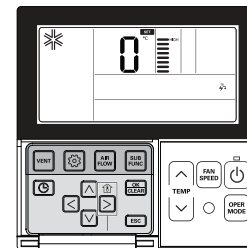


Press the  button.

If  button is pressed repeatedly, it is moved to Smart Load Control stage setting menu.

At this time, Smart Load Control icon is displayed and the setting value on the temperature display area is flickering.

Press  button and select Smart Load Control stage setting value.

 ✦ Smart Load Control stage can be set from 0 to 3, and it controls the strength of the cooling or heating function at the initial stage of operation.



- 0 : Function not used
- 1 : Smooth mode
- 2 : Normal mode
- 3 : Peak mode

If desired Smart Load Control stage value is displayed, press  button to complete setting.

If setting is completed, press  button.

✦ If there would be no button input for about 1 minute after setting, it exits from the setting mode automatically.

✦ If it is exited without pressing setting button, the handled value is not reflected.


When Smart Load Control is operated, Smart Load Control operation status is displayed as below.



Smart Load Control function may not work on some products.

Programming – Simple Reservation

Simple reservation function can be scheduled to stop while the system is in operation or to run while the system is not in operation.

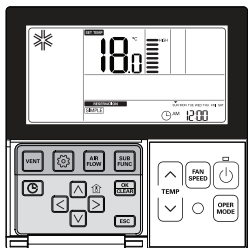


Press button to enter the programming mode.

Press button repeatedly to select 'SIMPLE.'

icon will blink and the scheduled time '0' will display.

Press button to program the scheduled time.

 The scheduled time can be programmed from 1 hour up to 7 hours.



Press button when the simple programming is finished.

- When the schedule setting is completed, icon will display in the lower LCD screen.

Press to exit.


* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

* If the button is not selected before you exit, the changes will not apply.

For the simple programming, if the scheduled time expires, the system will run or stop automatically.

Programming – Sleep Reservation

Sleep Reservation is a function that the air-conditioner runs in the sleep mode or stops after certain period of time while you are sleeping. When sleep mode is programmed after connecting to a ventilator, and in a certain period of time after sleep mode operation, only sleep mode will be cancelled.

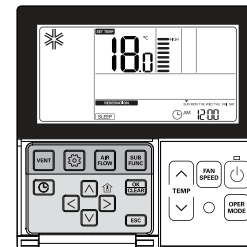


Press button to enter the programming mode.

Press button repeatedly to select 'SLEEP'. icon will blink and the scheduled time will display.

Press button to program the scheduled time.

The scheduled time can be programmed from 1 hour up to 7 hours.

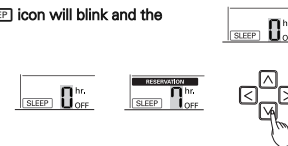

Press button when the SLEEP programming is completed.

Press to exit.

* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

* If the button is not selected before you exit, the changes will not apply.

- When the Sleep schedule is cancelled, icon will disappear.


NOTE

Set the moderate amount of time for SLEEP mode. (Excessive cooling is harmful for your health.)

- The desired temperature in the remote controller and the unit may not be identical because the SLEEP mode runs automatically adjusting the desired temperature for a pleasant cooling.
- Some product without a temperature control by 0.5°C operates OFF reservation instead of SLEEP reservation.

Programming – ON Reservation

It turns ON automatically at the time programmed.

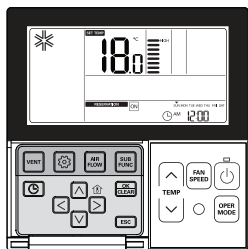

Press **[ON]** button to enter the programming mode.

Press **[ON]** button repeatedly to select 'ON'.
'ON' icon and 'AM' icon will blink.

Set 'AM/PM' using **[A]** **[P]** button.

Move to 'Hour' using **[<]** **[>]** button,

and set the 'Hour' using **[A]** **[P]** button.

Move to 'Minute' using **[<]** **[>]** button,

Set the 'Minute' using **[A]** **[P]** button.



Press **[ESC]** button when the ON reservation is completed.

Press **[ESC]** to exit.

✦ If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

✦ If the **[ON]** button is not selected before you exit, the changes will not apply.

- When the schedule setting is completed, **[ON]** icon will display in the lower LCD screen, and the system will run at the time programmed.
- When the ON schedule is cancelled, **[ON]** icon will disappear.

Programming – OFF Reservation

It turns OFF automatically at the time programmed.



Press **[ON]** button to enter the programming mode.

Press **[ON]** button repeatedly to select 'OFF'.
'OFF' icon and 'AM' icon will blink.



✦ You can program the 'AM/PM', 'Hour' and 'Minute' as the same way as the ON reservation.

Press **[ON]** button when the OFF reservation is completed.

Press **[ESC]** to exit.

✦ If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

✦ If the **[ON]** button is not selected before you exit, the changes will not apply.


- When the schedule setting is completed, **[OFF]** icon will display in the lower LCD screen, and the system will stop at the time programmed.
- When the schedule is cancelled, **[OFF]** icon will disappear.



Programming -Weekly Reservation

You can program daily schedule by week.

Weekly reservation keeps operating until before you cancel it once you setup.

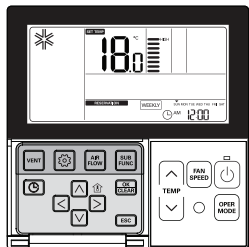

Press **[ON]** button to enter the programming mode.

✦ Weekly reservation can be programmed 2 schedules for one day, and up to 14 reservations for a week.

Ex) To program [2] Tuesday AM 11:30 ON~PM 12:30 OFF], follow the instructions as below.

 
Press **[ON]** button repeatedly to select 'WEEKLY'.

WEEKLY will blink.



Select 1 or 2 using **[1]** **[2]** button.

✦ You can program 2 schedules per day such as WEEKLY 1, WEEKLY 2.



Move to 'Day' using **[DAY]** button.

When the 'Day' is blinking, set the day.

Day setting is available for Monday through Sunday.

 


Move to 'AM/PM' using **[AM/PM]** button, and select AM/PM.



Move to 'Hour' section in the ON setting using **[HOUR]** button.

- This section is to program when the air-conditioner will turn ON.



Change the time using **[HOUR]** **[MINUTE]** button.

- You can program the 'Hour' from 1 hour up to 12 hours.



 
Move to 'Minute' section in the ON setting using **[MINUTE]** button.

When the 'Minute' button is blinking, press Up/Down button to set the 'Minute'.



Move to 'AM/PM' section in the OFF setting using **[AM/PM]** button.


- AM/PM setting is the same as the ON time setting.



Move to 'Hour' section in the OFF setting using **[HOUR]** button.

- This section is to program when system will turn OFF.

 - When the 'Hour' button is blinking, set the 'Hour'.



✦ Program the 'Hour' and 'Minute' as the same way as the ON time setting.

Press **[ON]** button Weekly Reservation programming is completed.

Set the OFF time later than the ON time when programming the time for Weekly Reservation

✦ If programming the temperature using the Up/Down button for the desired temperature during the weekly reservation, the system will be ON at the desired temperature.

- When desired temperature is not programmed, it is turned on automatically with desired temperature of previous operation.


✦ To cancel all the Weekly Reservation programmed,

- Press Set/Cancel button when the **WEEKLY** icon is blinking.

✦ To cancel the weekly reservation individually,

- Select the day you want to cancel and set the ON time and OFF time identically, and press Set/Cancel button.


< Weekly Reservation Description >

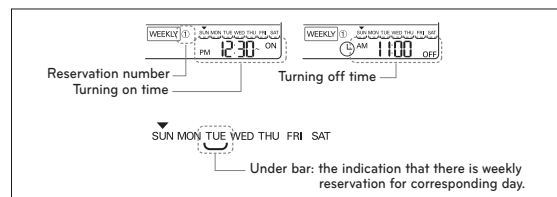



Programming –Holiday Reservation

The system will stop automatically on a set day.

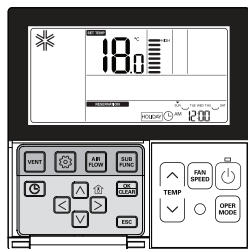

Press **[V]** button to enter the Schedule Programming mode.

Press **[V]** button repeatedly to select 'HOLIDAY'.



Move to the 'Day' you want to set using **[↑]** **[↓]** button.

SUN MON TUE WED THU FRI SAT

SUN MON TUE WED THU FRI SAT



Set or cancel HOLIDAY using **[A]** **[V]** button or **[ESC]** button.

Ex) If Monday/Friday is programmed as HOLIDAY, 'MON', 'FRI' will disappear.



Press **[ESC]** button to exit.

- Once set as HOLIDAYS, the system will stop automatically within 1 hour even after operating the air-conditioner unless the HOLIDAYS schedule is cancelled.

Ventilation Product User Manual – Interlinked Air conditioner and Ventilation

You can control the system by using a wired remote controller for an air conditioner indoor unit interlocked with a ventilator.

- When applying power, the remote controller will work after recognizing the system (for about 30 seconds).

	Single Operation	Interlinked Operation
General Ventilation	(General Ventilation Single Operation) General Ventilation Wired Remote Controller	(General Ventilation Interlinked Operation) Air conditioner Indoor unit General Ventilation Wired Remote Controller
Direct Expansion Ventilation	(Direct Expansion Ventilation Single Operation) Direct Expansion Ventilation Wired Remote Controller	(Direct Expansion Ventilation Interlinked Operation) Air conditioner Indoor unit Direct Expansion Ventilation Wired Remote Controller

✦ Connecting method is identical with the one in air conditioner instructions manual.
(See the Group control page in the Remote controller manual.)

Press **[VENT]** button on the wired remote controller to enter the ventilation control mode in order to verify the ventilator's operation.

 


Fig 2-1. Air conditioner mode

 


Fig 2-2. Vent mode

In order to return to the air conditioner mode, press 'Vent' button in the ventilation mode.

 
- If no button is selected for more than 15 seconds in the ventilation mode, the system will automatically convert to air conditioner mode.

✦ The ventilators include general ventilators and direct expansion ventilators.



The figure shows two views of the HP DesignJet 895C printer's front panel. The top view is a perspective drawing showing the paper output area with a large sheet of paper emerging from a tray labeled 'H'. To the right of the paper path are several status indicators and a small LCD screen displaying '2 PM' and a clock icon. Below the paper path is a control panel with buttons for 'EJECT', 'PAUSE', 'REFEED', 'PAGE DOWN', 'PAGE UP', and 'STOP'. The bottom view is a close-up of the control panel, highlighting the 'EJECT' button with a circular arrow icon, the 'PAUSE' button with a square icon containing a circle, the 'REFEED' button with a crown icon, the 'PAGE DOWN' button with a left-pointing triangle, the 'PAGE UP' button with a right-pointing triangle, and the 'STOP' button with a red X icon.

It can be used only when the air conditioner and the ventilator are interlocked.



Press button in the Vent mode to change the vent mode.

* It only displays on the remote controller display when it is in ventilation mode, and it displays the desired temperature when it returns to air condition mode.

- Each time you press the button the fan speed is selected in the order of low high power.

- 1) Auto conversion: if no button is selected for more than 15 seconds in the vent mode, the system will convert to air conditioner mode automatically.
- 2) Manual conversion: press the button in the vent mode to convert manually.

- The direct expansion ventilator individual operation will be displayed as shown in the figure.

- Each time you press the button the mode will change in the order of Heat exchange normal auto.

Vent mode	Remote controller display window	Description
Heat exchange		Circulating the air in the room without any heat loss
Normal		Circulating the air in the room without using an electric heating exchanger
Auto		Circulating the air in the room by comparing the indoor/outdoor temperatures automatically

In the case of heat exchange mode is shown below.

$$[\rightarrow [^{\neg} \rightarrow]^{\neg} \rightarrow]^{\neg} \rightarrow] \rightarrow _ | \rightarrow _ | \rightarrow \dots$$

* The indicator of 88Seg is displayed when only the direct expansion ventilation is operating with air conditioner OFF.

- Each time you press the button the mode will change in the order of cooling heating auto stop.

- Each time you press the button the fan speed is selected in the order of low high power.


* In the Direct expansion ventilator individual operation, it is possible to select cooling or heating and to adjust the desired temperature as well.

* See the Standard Operation – Temperature Setting for more information about the desired temperature adjustment.



Ventilation Product Additional Operations – Fast/Energy Saving

This function is to facilitate the ventilation function more efficiently by setting quick/energy-saving mode in the additional functions of ventilator.

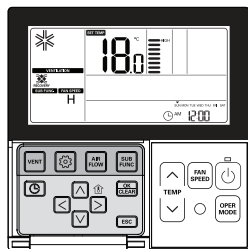

Fast

It ventilates quickly.

Press **[FAST]** button in the Vent mode.

- The additional vent mode converts Fast → Energy-saving sequentially.

Press **[ESC]** button when the **[FAST]** icon blinks on the display screen.



Press **[ESC]** button to exit.

Energy Saving

It performs Energy-saving function while ventilating efficiently.

Press **[FAST]** in the Vent mode.

The additional vent mode converts Fast → Energy-saving sequentially.

Press **[ESC]** button when the Energy-saving icon blinks on the display screen.




Press **[ESC]** button to exit.

- * The additional mode of general ventilation and direct expansion ventilation is identical.
- * The additional mode settings for air cleaner/heater/humidifier are as the same as the air conditioner.

Ventilation Product Function Settings

Ventilation starts after delay time.

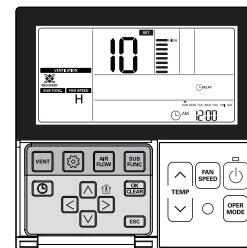


Delay time

Ventilation starts after delay time.

Press **[DELAY]** button.

Press **[DELAY]** button repeatedly to move to the delay time in the menu.

 The **[DELAY]** icon displays and blinks in the temperature display section.



Change the set value for delay time using **[UP]** **[DOWN]** button.

* The range of delay time settings : 00 ~ 60 (By 1 minute)

Press **[ESC]** button to complete the settings when the desired value for delay time displays.

Press **[ESC]** button to exit.

* If no button is selected for about 1 minute after setup, the system will exit automatically.

* If the **[ESC]** button is not selected before you exit, the changes will not apply.

Lock, Filter Cleaning, Time Setting, Converting Temperature

* Refer to 'Function Settings - Child Lock' part for lock function.

* Refer to 'Function Settings - Filter Sign Clear' part for Filter Cleaning function.

* Refer to 'Function Settings - Changing Current Time' part for Time Setting function.

* Refer to 'Function Settings - Change Temperature' part for Temperature Conversion function.






Ventilation Product Reservation Settings

Sleep Reservation

You can program a ventilator to run moderately while you are sleeping

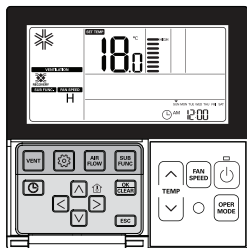

Press **[SLEEP]** button to enter the schedule programming mode.

Press **[SLEEP]** button repeatedly to move to SLEEP in the menu.
[SLEEP] icon will blink and the scheduled time will display.

Set the scheduled time using **[▲]** **[▼]** button.
 You can program the scheduled time from 1hour up to 12 hours.

Press **[ESC]** button when the SLEEP schedule is programmed.

Press **[ESC]** button to exit

 

- * If no button is selected for about 25 seconds after setup, the system will exit automatically.
- * If the **[ESC]** button is not selected before you exit, the changes will not apply.
- Once the schedule is programmed, **[SLEEP]** icon will display in the lower part of LCD.

- **[SLEEP]** icon will disappear when the schedule is cancelled.


If the SLEEP schedule is programmed, the system will run moderately during the scheduled time.

Simple, ON, OFF, Weekdays, Holidays Reservations

- * Please refer to the Reservation Settings part of the air conditioner for Simple, ON, OFF, Weekdays, Holidays Reservations

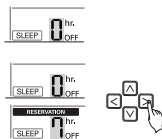

Ventilation Product Installer Setting Functions

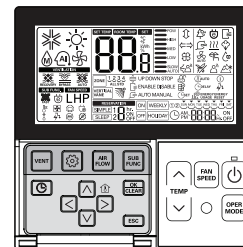


Press **[INSTALLER]** button to enter the ventilation mode.

Press and hold **[INSTALLER]** button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

 Once entered the installer settings mode, it displays the programmable data values in the lower right of LCD screen.



- * Some items in the menu may not be displayed depending on the product functions, or have different name in the menu.

CAUTION


Installer setting is a mode to set the detailed functions of remote controller.

If the installer setting mode is set improperly, it may cause a break down, injury, or property damage.

It must be set by a certified technician, and when it is installed without certified technician or changed discretionally, all of the problems are the responsibilities of the installer, and we do not provide service free of charge.

Ventilation Product Installer Setting Functions - Ventilation Fan Speed


This function is to change the standard fan speed of ventilation.

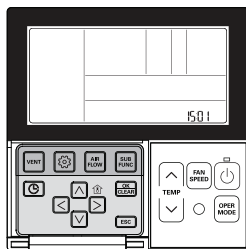


Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Press button repeatedly to move to the fan speed settings in the menu as below.



Select the fan speed mode using button.

 

Press button to complete the settings when the standard vent fan speed is selected.


Press button to exit.

- * If no button is selected for about 25 seconds after setup, the system will exit automatically.
- * If the button is not selected before you exit, the changes will not apply.


Different Mode Drive

Different mode drive appears when the Indoor Unit have different operating modes if several Indoor Unit are installed for a single outdoor unit.


Different mode drive doesn't appear in the cooling only models.

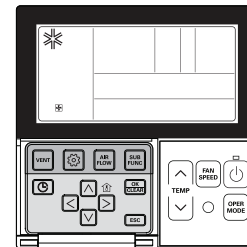

 If an indoor unit is forced to run heating while several Indoor Unit are in a cooling operation with a single outdoor unit, the system will not run heating.



 
If an indoor unit is forced to run cooling or dehumidifying while several Indoor Unit are in a heating operation with a single outdoor unit, the system will not run cooling or dehumidifying.
It indicates the outdoor is in a heating operation.



Press button and the indoor unit will automatically run in the same operating mode as the other Indoor Unit after about 5 seconds.





Self-diagnosis for Trouble Mode

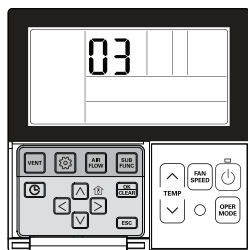

It automatically runs a self-diagnosis when there is a trouble detected in the system.

It displays the trouble mode number with maintenance CODE.

  
<Individual control>



<Group control>

✱ When detecting an error during group control, the system will display as below.
 
<In case of CH05 ERROR, 4 letters C,H,0,5 will display one by one.>



In order to expedite a service, please remember the error number and provide it when consulting an installer.

An emergency elevation grill can be operated even in the case of errors.
(Except the trouble mode number 03)

✱ If the centralized control lock or wired remote controller lock is programmed, this function will not work.

✱ Some product may not include this function.


Outage Compensation Function

If power supply fails due to outage or other reasons, the outage compensation function automatically retrieves the operating conditions previously programmed before the power failure. Thus, you don't need to press any buttons.


(Additional functions will not be retrieved automatically.)

Oil Change Warning

Only products with GHP(Gas Heat Pump) Product can use this.

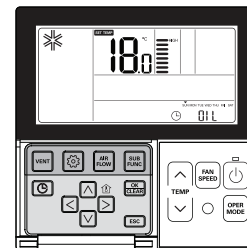

 Once the operation hours of the outdoor unit passes 10,000hours, the oil change-Indicator alarm occurs. When the alarm occurs, refer to the cover immediately to contact a service center in order to change the oil.




- When the oil is not changed, an error will occur to make the product impossible to run.

INSTALLATION INSTRUCTION

Please fix tightly using provided screw after placing remote controller setup board on the place where you like to setup.

- Please set it up not to bend because poor setup could take place if setup board bends.
Please set up remote controller board fit to the reclamation box if there is a reclamation box.
- Install the product so as not to make a gap with the wall side and to prevent shaking after the installation.

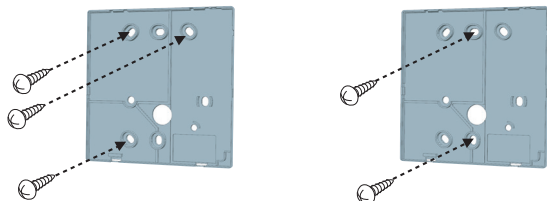


Can set up Wired remote controller cable into three directions.

- Setup direction: the surface of wall reclamation, upper, right
- If setting up remote controller cable into upper and right side, please set up after removing remote controller cable guide groove.

✱ Remove guide groove with long nose.


- 1 Reclamation to the surface of the wall
- 2 Upper part guide groove
- 3 Right part guide groove

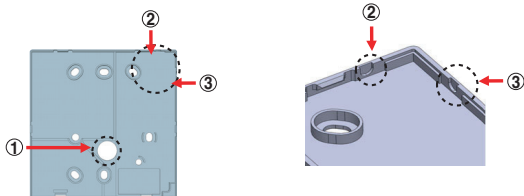

<Wire guide grooves>


Please fix remote controller upper part into the setup board attached to the surface of the wall, as the picture below, and then, connect with setup board by pressing lower part.

- Please connect not to make a gap at the remote controller and setup board's upper and lower, right and left part.
- Before assembly with the installation board, arrange the Cable not to interfere with circuit parts.

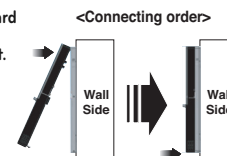


When separating remote controller from setup board, as the picture below, after inserting into the lower separating hole using screw driver and then, spinning clockwise, remote controller is separated.

- There are two separating holes. Please individually separate one at a time.
- Please be careful not to damage the inside components when separating.

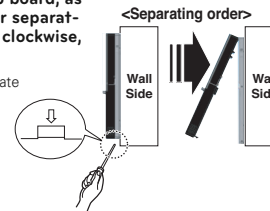

Please connect indoor unit and remote controller using connection cable.

DC 12 V	Red
Signal	Yellow
GND	Black

 

CAUTION

- Installation work must be performed in accordance with the national wiring standards by authorized personnel only.
- Installations must comply with the applicable local/national or international standards.
- Apply totally enclosed noncombustible conduit (metal raceway) in case of local electric & building code require plenum cable usage.

Please use extension cable if the distance between wired remote controller and indoor unit is more than 10m.

CAUTION

When installing the wired remote controller, do not bury it in the wall. (It can cause damage in the temperature sensor.)

The total cable length must not exceed 50m. (It can cause communication error.)


- When installing the extension cable, check the connecting direction of the connector of the remote controller side and the product side for correct installation.
- If you install the extension cable in the opposite direction, the connector will not be connected.
- Specification of extension cable: AWG 22, 2 Conductor, 1 Shield or above.



Group Control



When installing more than 2 units of air conditioner to one wired remote controller, please connect as the right figure.

- If it is not event communication indoor unit, set the unit as slave.
- Check for event communication through the product manual.

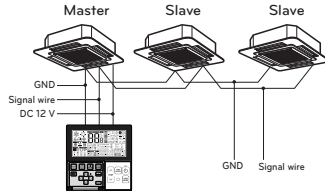

When controlling multiple indoor units with event communication function with one remote controller, you must change the master/slave setting from the indoor unit.

  
- After completion of master/slave setting of indoor unit and turn off the unit, 1 minute later turn it on again.
- For ceiling type cassette and duct product group, change the switch setting of the indoor PCB.



- For wall-mount type and stand type product, change the master/slave setting with the wireless remote controller. (Refer to wireless remote controller manual for detail)
 - ✱ When installing 2 remote controllers to one indoor unit with event communication function, set the master/slave of the remote controller. (Refer to remote controller master/slave selection)
- When controlling the group, some functions excluding basic operation setting, fan level Min/Mid/Max, remote controller lock setting and time setting may be limited.


When installing more than 2 wired remote controllers to one air conditioner, please connect as the right picture.

- When installing more than 2 units of wired remote controller to one air conditioner, set one wired remote controller as master and the others all as slaves, as shown in the right picture.
- You cannot control the group as shown in the right for some products.
- Refer to the product manual for more detail.

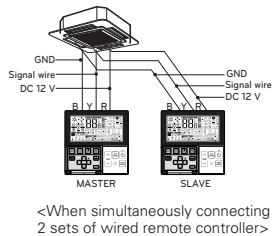


- When controlling in groups, set the master/slave of the remote controller. Refer to Installer setting section on how to set master/slave for more detail.

Installer Setting – Installer Setting Mode Approach

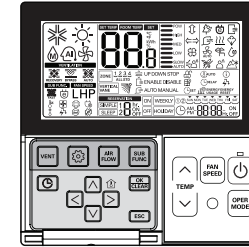

Keep pressing(over 3 seconds) the button repeatedly to scroll to the required function as described in the Installer setting code table below. Use the arrow buttons to select the required value, and then press the button. You can leave the installer menu by pressing . Alternatively, the installer mode will cease automatically if no buttons have been pressed for about 25 seconds.

 Once entered the installer settings mode, it displays the programmable data values in the lower right of LCD screen.



- Some items in the menu may not be displayed depending on the product functions, or have different name in the menu.

CAUTION

Installer setting is a mode to set the detailed functions of remote control. If the installer setting mode is set improperly, it may cause a break down, injury, or property damage.

The installation requires an expertise and must be performed by one of our service centers or expert installer providers.


The person who performed an installation takes responsibility for any troubles associated with the installation, and in this case, service will be charged.



* Some contents may not be displayed depending on the product function

Installer Setting – Setting Address of Central Control


This function is to be used when connecting to a central controller.
See the central controller manual for more detailed functions.

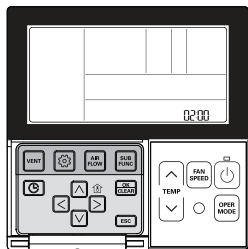

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

 Once entered the address setting mode using button, it displays as below.



Set the group No. using button. (0~F)



Move to the indoor unit No. set value using button.



Set the indoor unit No. value using button. (0~F)




Press button to complete the address setting.

Press button to exit.

- ✱ If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- ✱ If the button is not selected before you exit, the changes will not apply.

Installer Setting – ESP Setting

This function is to facilitate the installation by assigning a fan speed value to each speed.

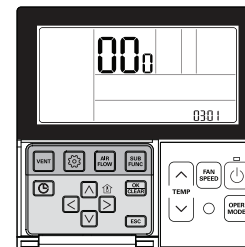


- If the ESP is set improperly, it can cause an air conditioner malfunction.
- This function must be set by a certified/qualified installer.

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

Once entered the ESP setting mode using button, it displays as below.

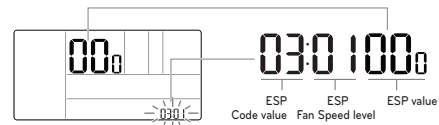

Select the level of ESP Fan Speed using button. There are 5 levels in the fan speed, SLOW LOW MED HIGH POW.



ESP level : 01~05

ESP level	Fan Speed
01	SLOW
02	LOW
03	MED
04	HIGH
05	POW.


✱ The ESP set value can be programmed 0~225.

Move to the ESP value settings using button.

The ESP value numbers will blink.
(It is set 000 by default.)



- If a fan speed ESP value is set for the product without very weak wind or power wind, the system may not operate.

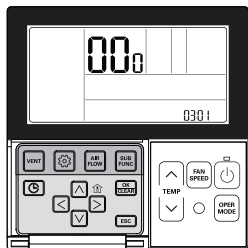

Set the ESP value using button.

000 → 225

(The ESP value can be set from 1 up to 255,
and 1 is the smallest value and 255 is the largest value.)

Select a fan speed again using button, and set the ESP value for each speed.

Ex) 120 set for Breeze 03:01 120 (ESP value for Breeze : 120)

Ex) 230 set for High 03:04 230 (ESP value for High : 230)

Press button to save the setting.


Press button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If the button is not selected before you exit, the changes will not apply.

- Pay special attention not to mix the ESP values for each speed.
- Some product may not allow you to program for Breeze and Power speed.
- The programmable ESP value may vary according to the product and capacity.
- When a power failure compensation is completed after power is on (at least 1 minute), Please set or check the ESP value.

Installer Setting – Thermistor


This function is to select a temperature sensor to determine the indoor temperature.

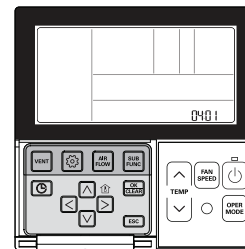

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

 Move to the Selection of Indoor Temperature Sensor (Thermistor) in the menu using button and then, it displays as below.



Select the location of indoor temperature sensor (Thermistor) using button.

Code value for Room temperature sensor (Thermistor) 04:01 Set value

* Set value for sensor location
01 : Remote control
02 : Indoor unit
03 : 2TH

Press button to save the setting.

Press button to exit.


- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If the button is not selected before you exit, the changes will not apply.

Temperature sensor selection location		Function
01	Remote control	Operating by a temperature sensor in Remote controller
02	Indoor unit	Operating by a temperature sensor in the indoor unit
03	2TH	Cooling Operating at a higher temperature after comparing the temperatures between indoor unit and cable remote control (Some product may operate at a lower temperature.)
	2TH	Heating Operating at a lower temperature after comparing the temperatures between indoor unit and cable remote control

* 2TH functions/features vary according to the product.

Installer Setting – Ceiling Height Selection

This function is to adjust the level of fan speed according to the height of ceiling for ceiling type product.

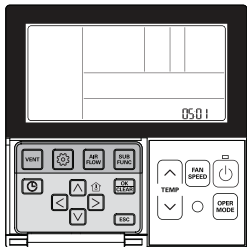

Press and hold **[FAN SETTING]** button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.

Make sure to press and hold for more than 3 seconds.

Move to Ceiling Height Selection in the menu using **[FAN SETTING]** and then, it displays as below.

Select the height of ceiling using **[FAN SETTING]** button.



* Set value for ceiling height
01 : Low
02 : Medium
03 : High
04 : Very high



Press **[FAN SETTING]** button to save the setting.

Press **[FAN SETTING]** button to exit.

* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.


* If the **[FAN SETTING]** button is not selected before you exit, the changes will not apply.

Ceiling Height Level	Function
01 Low	Operate the indoor fan speed at one level below the average fan speed.
02 Medium	Operate the indoor fan speed at the average fan speed.
03 High	Operate the indoor fan speed at one level above the average fan speed.
04 Very high	Operate the indoor fan speed at two levels above the average fan speed.

- The ceiling height selection settings are limited to some product.
- The very high ceiling height function may not be available for some Indoor Unit.
- See the product manual for more details.

Installer Setting – Static Pressure Setting

Selecting the static pressure is only available for duct products. For other products, the static pressure selection cannot be set.

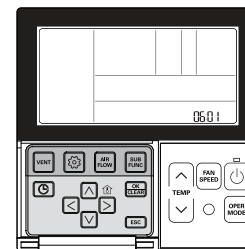

Press and hold **[FAN SETTING]** button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.

Make sure to press and hold for more than 3 seconds.

Press **[FAN SETTING]** button repeatedly to move to the static pressure selection in the menu as below.

Select the level of static pressure using **[FAN SETTING]** button.



* Set value for static pressure
01 : V-H
02 : F-H
03 : V-L
04 : F-L



Press **[FAN SETTING]** button to save the setting.

Press **[FAN SETTING]** button to exit.

* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.


* If the **[FAN SETTING]** button is not selected before you exit, the changes will not apply.

<Static Pressure Setting Table>

Pressure selection		Function	
		Zone state	ESP standard value
01	V - H	Variable	High
02	F - H	Fixed	High
03	V - L	Variable	Low
04	F - L	Fixed	Low

Installer Setting – Remote Controller Master/Slave Setup

This function is the settings when controlling 2-remote controls or group control.

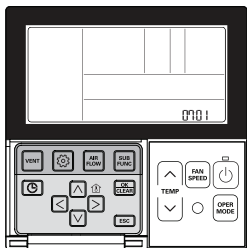


Press and hold **[RE]** button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

Move to the Master/slave selection in the menu using **[RE]** button and then it displays as below.

 Select the remote control master/slave using **[A]** **[V]** button.



Press **[ESC]** button to save the setting.

Press **[ESC]** button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If the **[ESC]** button is not selected before you exit, the changes will not apply.


Remote control	Function
01 Master	The Indoor Unit run by master remote controller in case of group control. (Set as a master by default)
02 Slave	Set all the remote controllers as slaves except one master remote control for group control.

* See the 'Group control' section for more information about master/slave.

- Some functions may not be available during a group control except basic operation settings, fan speed low/med/high, remote control lock setting, time setting.

Installer Setting – Override Master/Slave Setting

Override master/slave selection function is, since Multi-V 7 series model, the function to prevent product's different mode operation. If it setup as the slave, It blocks to change opposite run mode to outdoor unit cycle (cooling/heating)

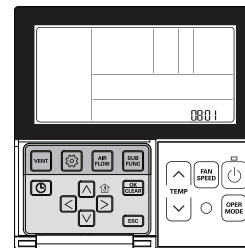

Press and hold **[RE]** button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

Move to the Master/slave selection in the menu using **[RE]** button and then it displays as below.

Select the operation master/slave using **[A]** **[V]** button.




Press **[ESC]** button to save the setting.

Press **[ESC]** button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If the **[ESC]** button is not selected before you exit, the changes will not apply.
- * If selected as the operation 'slave', it displays **[RE]** in the remote controller screen as shown in figure 1.

 
figure 1.



- * Some product may not include the operation master/slave selection function.

Installer Setting – Dry Contact mode Setting


This function is available only for the products with dry contact device.

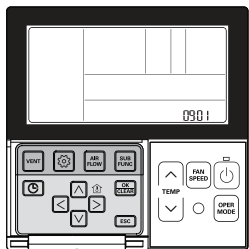

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Move to the Dry Contact Mode Settings in the menu using button and then it displays as below.



Select the Dry Contact Mode using button.

0901
Code value for dry contact Set value

Set value for dry contact
00 : Manual
01 : Auto



Press button to save the setting.

Press button to exit.

- # If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- # If the button is not selected before you exit, the changes will not apply.

- See the Dry Contact manual for more detailed functions about dry contact mode.


► What is Dry Contact?

It means a contact signal received when an air conditioner runs interlocking with hotel key card or sensor.

Installer Setting – Zone State

This function is to set the fan speed mode of indoor unit as fixed or variable.


- Variable : Comp ON, setup fan speed. Comp OFF, weak wind
- Fixed : Comp ON, setup fan speed. Comp OFF, setup fan speed.

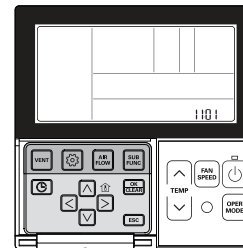

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Press button repeatedly to move to the zone state selection in the menu as below.



Select the zone state using button.

1101
Code value for Zone State Set value

Set value for Zone State
01 : Variable
02 : Fixed




Press button to save the setting.

Press button to exit.

- # If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- # If the button is not selected before you exit, the changes will not apply.

Installer Setting – Celsius/Fahrenheit Switching


This function is used for switching the display between Celsius and Fahrenheit.
(Optimized only for U.S.A)

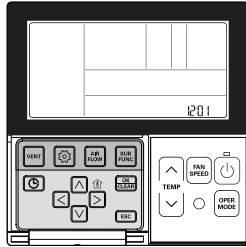

Press and hold  button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Move to the Celsius/Fahrenheit Switching in the menu using  button and then it displays as below.



Select the Celsius/Fahrenheit Switching using   button.



Press  button to save the setting.

Press  button to exit.


- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.



Whenever press   button in Fahrenheit mode, the temperature will increase/drop 2 degrees.

Installer Setting – Zone Type Setting

This function is only available on some products. It is possible to setup zone new type or old one of the product which is available to install the damper controller.

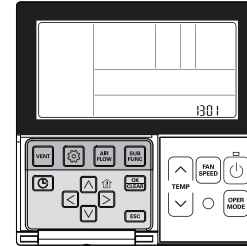


CAUTION

If you set zone number incorrectly, the product may malfunction especially in zone control.
This function must be carried out by a certificated-technician.

Press and hold  button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Move to the Zone Type Setting in the menu using  button and then it displays as below.



Select the Zone Type Setting using   button.




Press  button to save the setting.

Press  button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

Installer Setting – Zone Number Setting


This function is only available on some products. Zone Number is to set the number of installed zones. It's possible to control only in zone new type

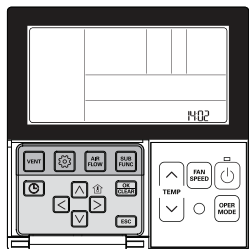


Press and hold  button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

 Move to the Zone Number Setting in the menu using  button and then it displays as below.



 Select the Zone Number Setting using   button.




Press  button to save the setting.

Press  button to exit.

- ✱ If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.

Installer Setting – Celsius Control Setting


This function is to set the unit for temperature control by 1°C or 0.5°C.

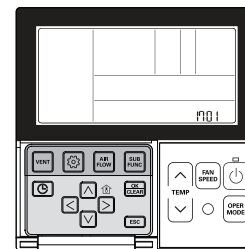


Press and hold  button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

 Move to the Centigrade Control Settings in the menu using  button and then it displays as below.



 Select the Centigrade Control Settings using   button.



Press  button to save the setting.

Press  button to exit.

- ✱ If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- ✱ If the  button is not selected before you exit, the changes will not apply.

Installer Setting – Emergency Heater Setting

This function is only available on some products


This function will set the Emergency Heater Setting.

Emergency Heater is used to heat the space in emergency case such as heat pump error.

Emergency heat is in place of and does not supplement heat pump.

✦ Emergency Heater setting Function sets following conditions:

- 1) Emergency Heater operation while in error or outdoor unit operates cooling cycle.
- 2) Emergency Heater operation in Low Ambient temperature
- 3) Fan speed setting during Emergency Heater operation

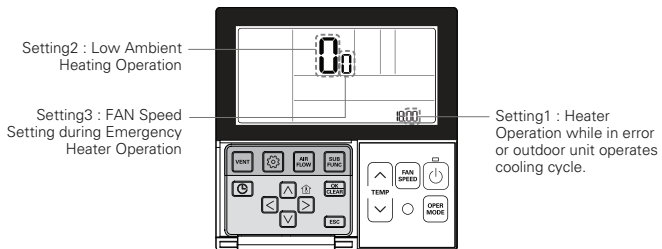

CAUTION

 
This function setting must be carried out by a certified-technician.
Incorrect function setting can cause fire.

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.

Make sure to press and hold for more than 3 seconds.

Move to the Emergency Heater Setting in the menu using button and then it displays as below.



Select the Emergency Heater Setting using button.

✦ If 00 is set at this stage, setting 2 & setting 3 will not be available.

18:00

✦ Set value for Function Setting
00 : not use
01 : use

Function Code

Setting1: Heater Operation while in error or outdoor unit operates cooling cycle.



Move to Low Ambient Heating Operation setting by pressing button.



Press button to setup Low Ambient Heating Operation.



00: Not use

01~03: compressor on/off Setting step

00

01~15: compressor on/off Setting step(step expand indoor unit)

00.0

✦ Emergency heater operation in Low Ambient temperature

- compressor off : Emergency heater enabled
- compressor on : Emergency heater disabled

Move FAN Speed Setting during Emergency Heater Operation by pressing button.



Press button to setup FAN Speed during Emergency Heater Operation.

0 : fan off

1 : fan on




Press button to save.

Press button to exit or system will automatically exit after 25 seconds without any input.

Installer Setting – Function Control Setting for Group Control

This function is to control the common functions or some functions based on the master indoor unit criteria for group control.

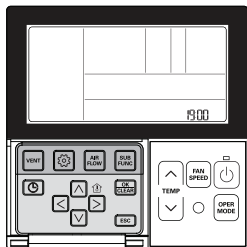

Press and hold **[FUNCTION]** button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

Move to the Function Settings for Group Control in the menu using **[FUNCTION]** button and then it displays as below.



Select the Function Settings for Group Control using **[A]** **[V]** button.



* Set value for Function Setting for Group Control settings
00 : Common function
01 : Common function, some indoor unit master criteria



Press **[ESC]** button to save the setting.


Press **[ESC]** button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If **[ESC]** button is not selected before you exit, the changes will not apply.

- Common function, some indoor unit master criteria must be set for a group of the same indoor unit series.
- In case of group control for the products which have different indoor models, use the existing group control mode by setting 00(common function use only).

Installer Setting – Option Function Setting


This function is used when air Cleaner, heater, humidifier, elevation grill, ventilation KIT are installed additionally or the installed KIT is removed.

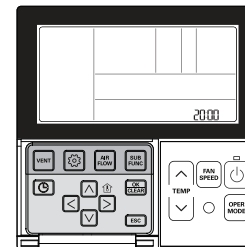

Press and hold **[FUNCTION]** button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Press **[FUNCTION]** button repeatedly to move to the applicable Function in the menu as below.



Function	Code
Plasma purification	20
Electric heater	21
Humidifier	22
Elevation grill	23
Ventilation kit	24
Auxiliary heater	25

Select the code value and set value for each function using **[A]** **[V]** button.



* Set value for each function
00 : Not installed
01 : Installed



- * In case of indoor unit that has one more additional stage in the Aux heater setting.
00: not installed
01: installed - general
02: installed - duct type


Press **[ESC]** button to save the setting.

Press **[ESC]** button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If **[ESC]** button is not selected before you exit, the changes will not apply.

Installer Setting – Indoor Unit Address Checking


This function is to identify the indoor unit address assigned by the outdoor unit.

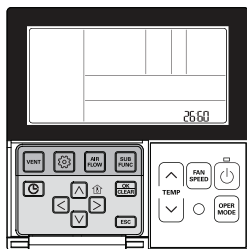

Press and hold  button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Press  button repeatedly to move to the Indoor Unit Address Checking in the menu as below.




Press  button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If  button is not selected before you exit, the changes will not apply.

Installer Setting – Setting for Refrigerant Leak Detector


This function is used when a refrigerant leak detector is additionally installed in the indoor unit or the installed detector is removed.

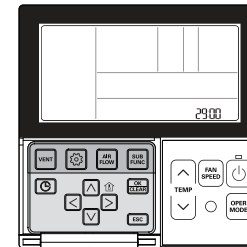

Press and hold  button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Press  button repeatedly to move to the Settings for Refrigerant Leak Detector Installation in the menu as below.



Select the code value and set value for each function using   button.

29.00
Code value Set value

* Set value for Refrigerant
Leak Detector Installation
00 : Not installed
01 : Installed




Press  button to save the setting.

Press  button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If  button is not selected before you exit, the changes will not apply.

Installer Setting – Static Pressure Step Setting


This function is applied to only duct type. Setting this in other cases will cause malfunction.
This function is only available on some models.
This is the function that static pressure of the product is divided in 11 steps for setting.

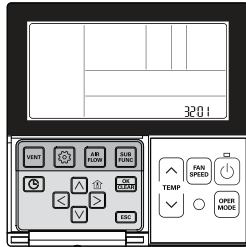

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Press button repeatedly to move to the Settings for Static Pressure Step in the menu as below.



Select the code value and set value for each function using button.

32.01
Code value Set value

* Set value for static pressure step
00 : use static pressure(code 06) set value
01~ 11 : static pressure step (code 32) set value



Press button to save the setting.


Press button to exit.

* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
* If button is not selected before you exit, the changes will not apply.

- Static Pressure (Code 06) setting will not be used if Static Pressure Step (Code 32) setting is being used.
- For the static pressure value for each step, refer to the indoor unit in the product manual.

Installer Setting – Fan operation in the cooling mode and thermal off conditions


This is the function to set indoor unit fan operation at the cooling mode and thermal off conditions.

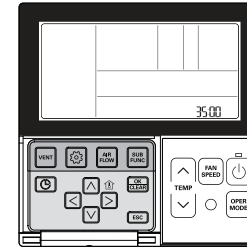

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
Make sure to press and hold for more than 3 seconds.

 Press button repeatedly to move to the Settings for Fan operation in the cooling mode and thermal off conditions in the menu as below.



Select the code value and set value for each function using button.

35.00
Code value Set value

* Set value

value	Fan operation
00	Fan speed Low
01	Fan off
02	Fan speed Setting value




Press button to save the setting.

Press button to exit.

* If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
* If button is not selected before you exit, the changes will not apply.

Installer Setting – Indoor unit Auto-Start setting


It is a function that sets whether to restore the indoor unit operation by resuming the previous power-on state or as power-off state in the power failure compensation.

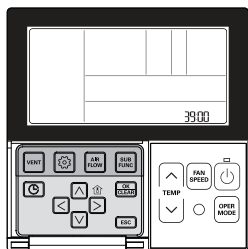

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

 Press button repeatedly to move to the Settings for Indoor unit Auto-Start setting in the menu as below.



Select the code value and set value for each function using button.

39.00
Code value Set value

* Set value
00 : Use indoor unit auto restart
01 : Not use indoor unit auto restart




Press button to save the setting.

Press button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If button is not selected before you exit, the changes will not apply.

Installer Setting – Occupancy Duration Time Setting


It is a function that sets the occupancy duration after motion is detected when installing an occupancy sensor.

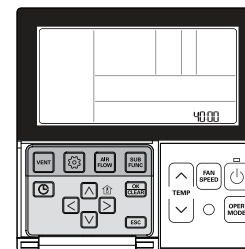

Press and hold button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

 Press button repeatedly to move to the Settings for Occupancy Duration Time in the menu as below.



Select the code value and set value for each function using button.

40.00
Code value Set value

* Set value

value	time setting
00	0 minute
01	10 minutes
02	30 minutes
03	60 minutes




Press button to save the setting.

Press button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If button is not selected before you exit, the changes will not apply.

Installer Setting – Setting for Simple Dry contact unit


This function is used when simple dry contact unit is additionally installed in the indoor unit or the installed simple dry contact unit is removed.

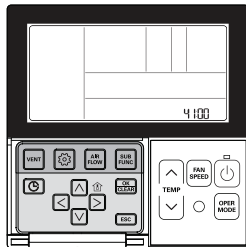

Press and hold **[SET]** button for more than 3 seconds to enter the installer settings mode.

- If pressing only once briefly, it will enter the user settings mode.
- Make sure to press and hold for more than 3 seconds.

 Press **[SET]** button repeatedly to move to the Settings for Simple Dry contact unit setting value in the menu as below.



Select the code value and set value for each function using **[▲]** **[▼]** button.

4100
Code value Set value

* Set value

value	setting
00	Default – Simple Dry contact Auto identification
01	Simple Dry contact : Not installed
02	Simple Dry contact : Installed
03	Use for digital input




Press **[SET]** button to save the setting.

Press **[ESC]** button to exit.

- * If no button is selected for about 25 seconds after setup, it exits the setup mode automatically.
- * If **[ESC]** button is not selected before you exit, the changes will not apply.

Setting the stage value of Comfort cooling

Set the stage of the power-saving effect of Comfort cooling.

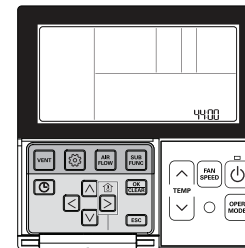


If **[SET]** button is pressed so long for over 3 seconds, it enters to the installer setting mode.

- If it is pressed shortly for one time, it enters to the user setting mode.

Be sure to press it for so long over 3 seconds.

 If **[SET]** button is pressed repeatedly, it is moved to Comfort cooling stage value setting menu as the picture below.



Press **[▲]** **[▼]** button and select the code value and setting value per each function.

4400
Code value Setting value

Setting the stage value of Comfort cooling

- 00 : Power-saving effect low (outdoor unit step 1)
- 01 : Power-saving effect medium (outdoor unit step 2)
- 02 : Power-saving effect high (outdoor unit step 3)



After selecting the corresponding function, press **[SET]** button to complete the setting.


Press the **[ESC]** button to exit the setting mode.

- * If there would be no button input for about 25 seconds after setting, it exits from the setting mode automatically.
- * If it is exited without pressing **[SET]** button, the handled value is not reflected.

If power-saving effect is increased, the cooling function is decreased little by little, so adjust it according to the indoor condition.

Setting Fan continuous

It is the function to set the continuous operation of the indoor fan.
Even if the room air temperature reaches the desired temperature through the air conditioning operation it is the ability to run a set flow rate without reducing the air flow.

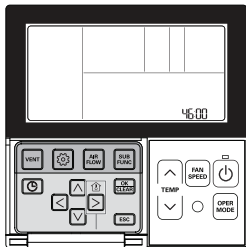

If button is pressed so long for over 3 seconds, it enters to the installer setting mode.

- If it is pressed shortly for one time, it enters to the user setting mode.

Be sure to press it for so long over 3 seconds.

If button is pressed repeatedly, it is moved to Fan continuous setting menu as the picture below.



Press button and select the code value and setting value per each function.

46.00

Code value Setting value

Setting Fan continuous
00 : not used
01 : Fan continuous used



After selecting the corresponding function, press button to complete the setting.


Press the button to exit the setting mode.

* If there would be no button input for about 25 seconds after setting, it exits from the setting mode automatically.

* If it is exited without pressing button, the handled value is not reflected.

Outdoor unit Function master/slave

Outdoor Function master/slave selection is the function to prevent confusion of the operation of the outdoor unit by making to select only indoor unit set as master, among some part of the function.

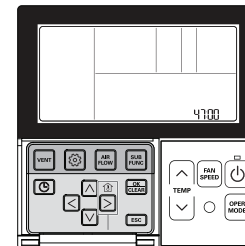


If button is pressed so long for over 3 seconds, it enters to the installer setting mode.

- If it is pressed shortly for one time, it enters to the user setting mode.

Be sure to press it for so long over 3 seconds.

 If button is pressed repeatedly, it is moved to Outdoor unit Function setting master/slave menu as the picture below.



Press button and select the code value and setting value per each function.

47.00

Code value Setting value

Outdoor unit Function master/slave setting
00 : Outdoor unit function slave
01 : Outdoor unit function master



After selecting the corresponding function, press button to complete the setting.

Press the button to exit the setting mode.

* If there would be no button input for about 25 seconds after setting, it exits from the setting mode automatically.


* If it is exited without pressing button, the handled value is not reflected.

CAUTION

When you change the outdoor-unit function master/slave from master to slave, please check the operating status outdoor-unit function (Smart Load Control). You must change after stopping outdoor-unit function.

Function of indoor unit silent mode

It is the function to reduce the refrigerant noise occurred at the initial stage of the operation of the indoor unit at the heating mode.

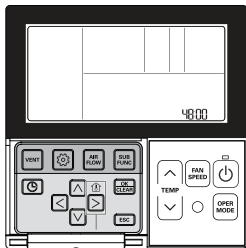


If button is pressed so long for over 3 seconds, it enters to the installer setting mode.

- If it is pressed shortly for one time, it enters to the user setting mode.

Be sure to press it for so long over 3 seconds.

 If button is pressed so long for over 3 seconds, it enters to the installer setting mode.



Press button and select the code value and setting value per each function.

48:00

Code value

Setting value

Setting the indoor unit silent mode

00 : Not used

01 : Noise reduction low

02 : Noise reduction high



After selecting the corresponding function, press button to complete the setting.

Press the button to exit the setting mode.


✦ If there would be no button input for about 25 seconds after setting, it exits from the setting mode automatically.

✦ If it is exited without pressing button, the handled value is not reflected.

The corresponding Function setting is available when connecting the products designated as outdoor unit Function setting master.

Setting the outdoor unit defrost mode

It is the function to select the defrost mode of the outdoor unit.

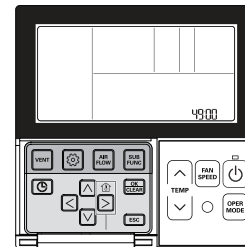


If button is pressed so long for over 3 seconds, it enters to the installer setting mode.

- If it is pressed shortly for one time, it enters to the user setting mode.

Be sure to press it for so long over 3 seconds.

 If button is pressed repeatedly, it is moved to Outdoor unit defrost mode setting menu as the picture below.



Press button and select the code value and setting value per each function.

49:00

Code value

Setting value

Setting the outdoor unit defrost mode

00 - Not used

01 - Forced remove piled snow mode

02 - Fast defrost mode

03 - Forced remove piled snow and Fast defrost mode



* Forced remove piled snow : Remove the snow on the upper side of the outdoor unit by operating outdoor fan.

* Fast defrost: Unfreeze the frost of the outdoor heat exchanger often.

After selecting the corresponding function, press button to complete the setting.

Press the button to exit the setting mode.

✦ If there would be no button input for about 25 seconds after setting, it exits from the setting mode automatically.

✦ If it is exited without pressing button, the handled value is not reflected.

The corresponding Function setting is available when connecting the products designated as outdoor unit Function setting master.

Disposal of your old appliance(as per e-waste Rules)



1. When this crossed out wheeled bin symbol is depicted on the product and its operator's manual, it means the product is covered by the e-waste Management and Handling Rules, 2011 and are meant to be recycled, dismantled, refurbished or disposed off.

2. Dos

- a. The product is required to be handed over only to the authorized recycle for disposal.
- b. Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.

Don't

- a. The product should not be opened by the user himself/herself, but only by authorized service personnel.
- b. The product is not meant for re-sale to any unauthorized agencies/scraper dealer/kabariwalah.
- c. The product is not meant for mixing into household waste stream.
- d. Do not keep any replaced spare part(s) from the product in exposed area.

3. Any disposal through unauthorized agencies/person will attract action under Environment (Protection) Act 1986 .

4. This product is complied with the requirement of Hazardous Substances as specified under Rule 13 (1) & (2) of the E-Waste (Management & Handling) Rules, 2011.

5. To locate a nearest collection centre or call for pick-up (limited area only) for disposal of this appliance, please contact Toll Free No. **1800-180-9999** for details. All collection centre and pick up facilities are done by third parties with **LG Electronics India Pvt. Ltd.** Merely as a facilitator.

For more detailed information , please visit : <http://www.lge.com/in>.

अपने पुराने नपिटान के उपकरण (ई-अपशष्टि नयिम के अनुसार)



- 1..जब इस काटे गए पहिये वाले बनि का चनिह किसी उपकरण और इसके ओपरेटर की पुस्तकी के साथ संलग्न होता है तो इसका मतलब है कि इसे "ई-अपशष्टि" (प्रबंधन और हथालन) नयिम २०११ के अंतर्गत सम्मलित किया गया है , और इसे नवीनीकरणकरण ,वधितन और नपिटान के लिए बनाया गया है ।

2.करें

क . उपकरण को सरिफ अधकृत पुनः नवीनीकरणकर्ता को ही नपितारन करने हेतु हस्तांतरति करें ।

ख. जब उपकरण कार्यरत न हो इसे अलग क्षेत्र में रखें ताकि उपकरण से होने वाली दुर्घटनाओं से बचा जा सके ।
न करें

क. इस उपकरण को स्वयं/खुद नहीं खोलना चाहिए ! उपकरण को केवल अधकृत अधिकारी के द्वारा ही खोला जाना चाहिए ।

ख. इस उपकरण को पुनः बिक्री के लिए किसी भी कबाड़ीवाला / भंगार-वाला / अनाधकृत संस्था को न दें ।

ग. इस उपकरण को किसी घरेलू अपशष्टि सामान के साथ मलिकर न रखें ।

घ. उपकरण के बदले हुए या आंतरिकि पुरजो को खुले क्षेत्र में न रखें ।

3. यदि किसी अनाधकृत विभागा या व्यक्तिके द्वारा नपितारन किया जाता है तो यह पर्यावरण (सुरक्षा) धारा १९८६ के अंतर्गत आता है ।

4. यह उत्पाद खतरनाक पदार्थों के लिए बनाये गए नियमांक १३ (१) और (२), ई-वेस्ट (प्रबन्धन और रखरखाव) नयिम २०११ के कानून का पालन करता है.

5. उपरोक्त पदार्थो के नपितारन के लिए नजदीकी नपितारन संस्थान (संकीरण क्षेत्र) में कॉल करें। अधिक जानकारी के लिए हमारे टोल फ्री नंबर **1800-180-9999** पर कॉल करें. सभी संग्रहण केंद्र व पकि-अप की सुविधाएं किसी थर्ड-पार्टी जो "LG Electronics India Pvt. Ltd." को अपनी सेवाएं प्रदान कर रही हैं, से करवाएँ ।

ज्यादा जानकारी के लिए देखें वेब:साईट - <http://www.lge.com/in>

